
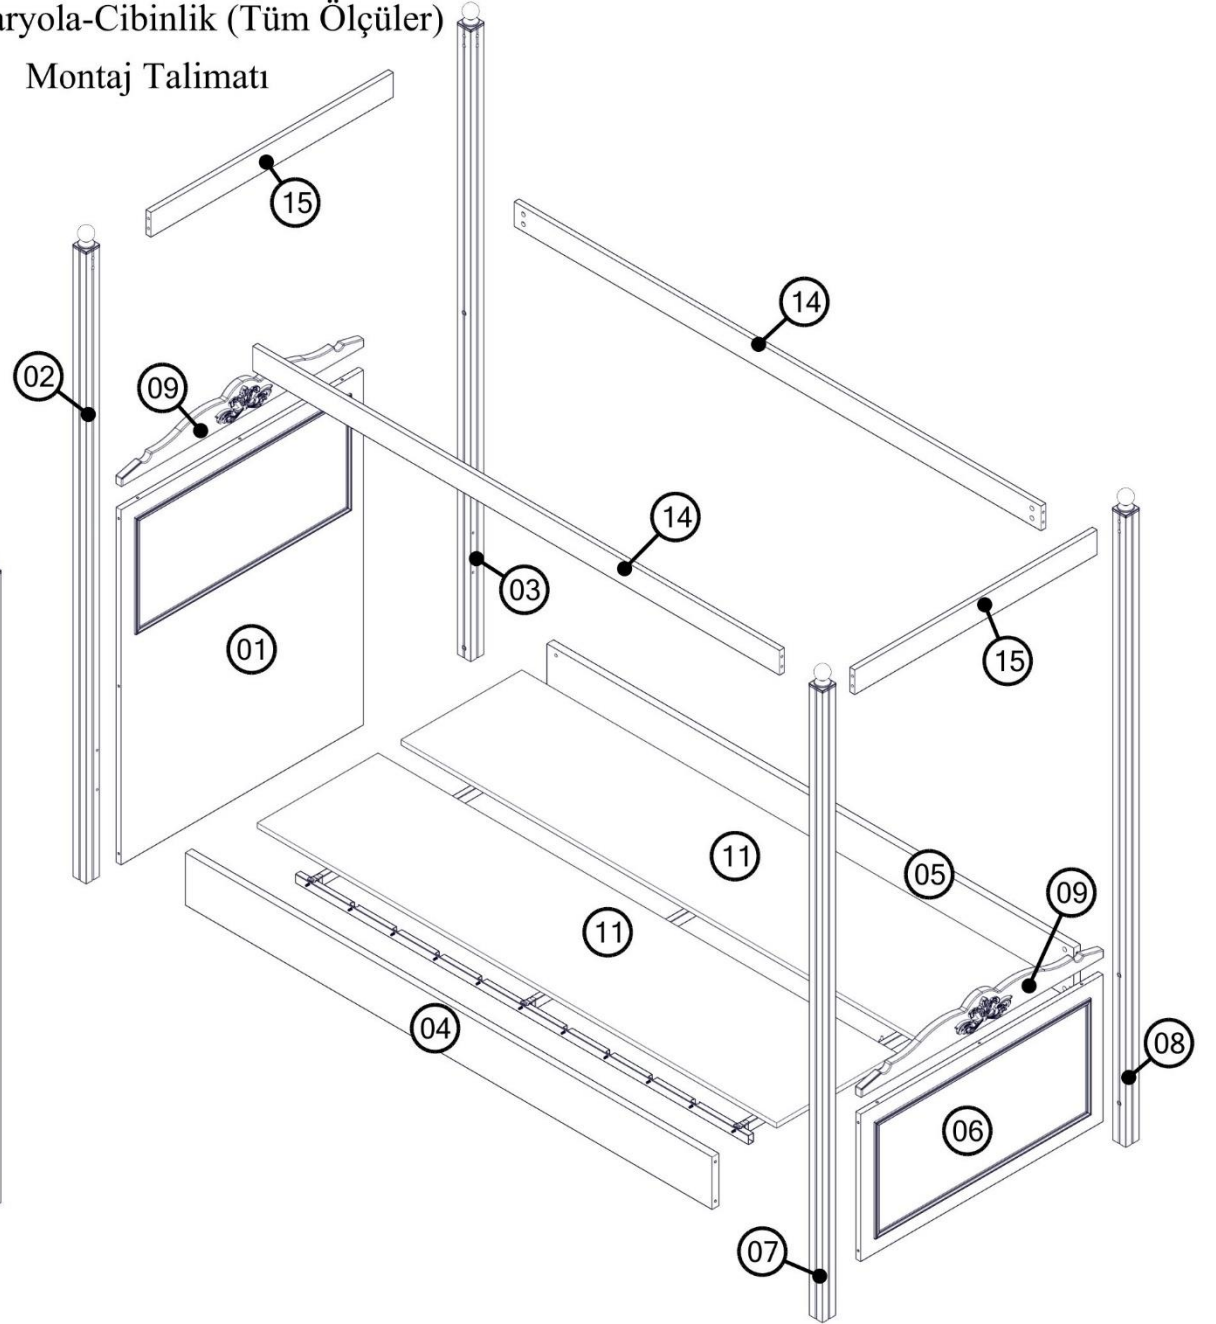


LORA Headboard and Bedframe-Canopy for Mosquito NET (All Sizes)

Assembly Instructions

LORA Karyola-Cibinlik (Tüm Ölçüler)

Montaj Talimatı

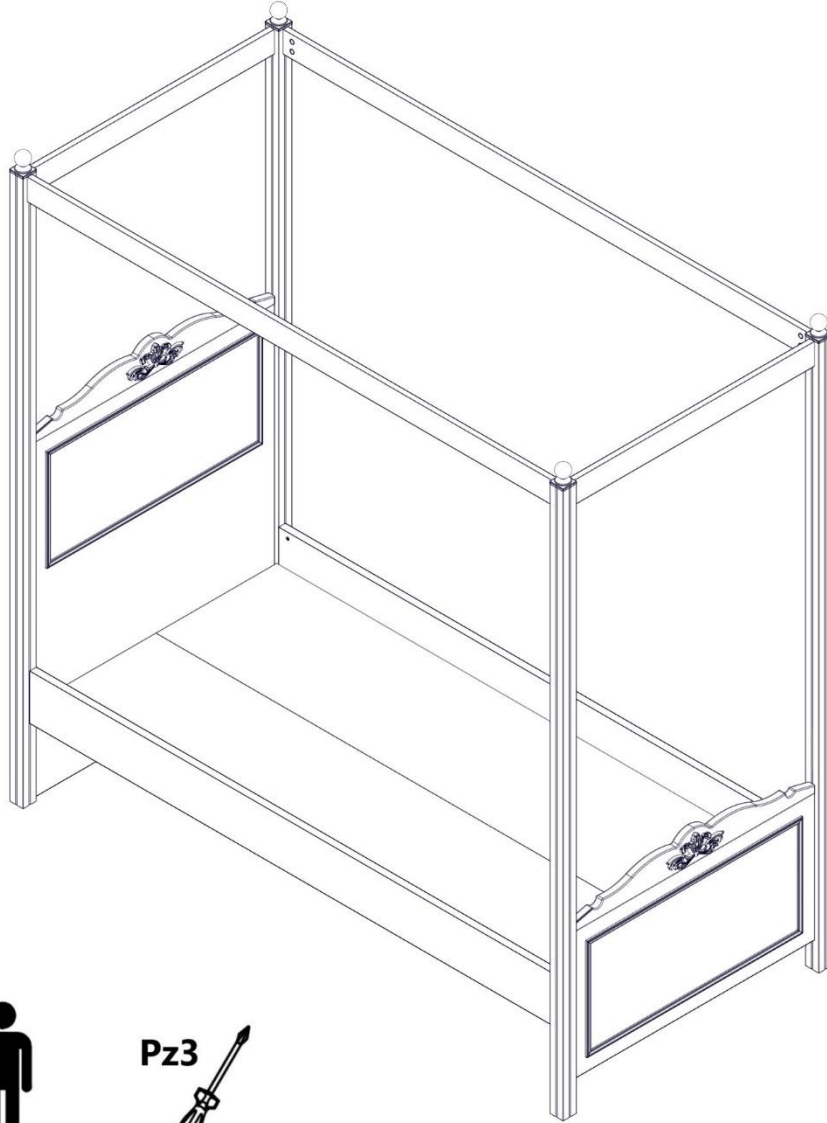


Pz3



PEOPLE NEEDED REQUIRED TOOL

Package Includes

Paket İçeriği

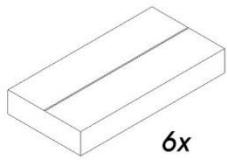

6x

Headboard and Bedframe-Canopy for Mosquito NET
Size 90X200 Parts

N	L (mm)	W (mm)	T (mm)
01	910.00	1153.00	26.00
02	2050.00	50.00	50.00
03	2050.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	910.00	26.00
07	2050.00	50.00	50.00
08	2050.00	50.00	50.00
09	115.00	909.00	25.00
11	1950.00	454.00	17.00
14	1978.00	80.00	18.00
15	910.00	80.00	18.00

Headboard and Bedframe-Canopy for Mosquito NET
Size 100X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1010.00	1153.00	26.00
02	2050.00	50.00	50.00
03	2050.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	1010.00	26.00
07	2050.00	50.00	50.00
08	2050.00	50.00	50.00
09	115.00	1009.00	25.00
11	1950.00	504.00	17.00
14	1978.00	80.00	18.00
15	1010.00	80.00	18.00

Headboard and Bedframe-Canopy for Mosquito NET
Size 120X200 Parts

N	L (mm)	W (mm)	T (mm)
01	1210.00	1153.00	26.00
02	2050.00	50.00	50.00
03	2050.00	50.00	50.00
04	1978.00	170.00	25.00
05	1978.00	170.00	25.00
06	478.00	1210.00	26.00
07	2050.00	50.00	50.00
08	2050.00	50.00	50.00
09	115.00	1209.00	25.00
11	1950.00	604.00	17.00
14	1978.00	80.00	18.00
15	1210.00	80.00	18.00



A

16x



B

22x



C

4x



D

4x



E

20x



E1

20x




E2

20x



F

4x



G

4x



H

4x



I

2x



J

2x



K

5x



L

4x



M

1x



N

16x




O


16x






P

16x


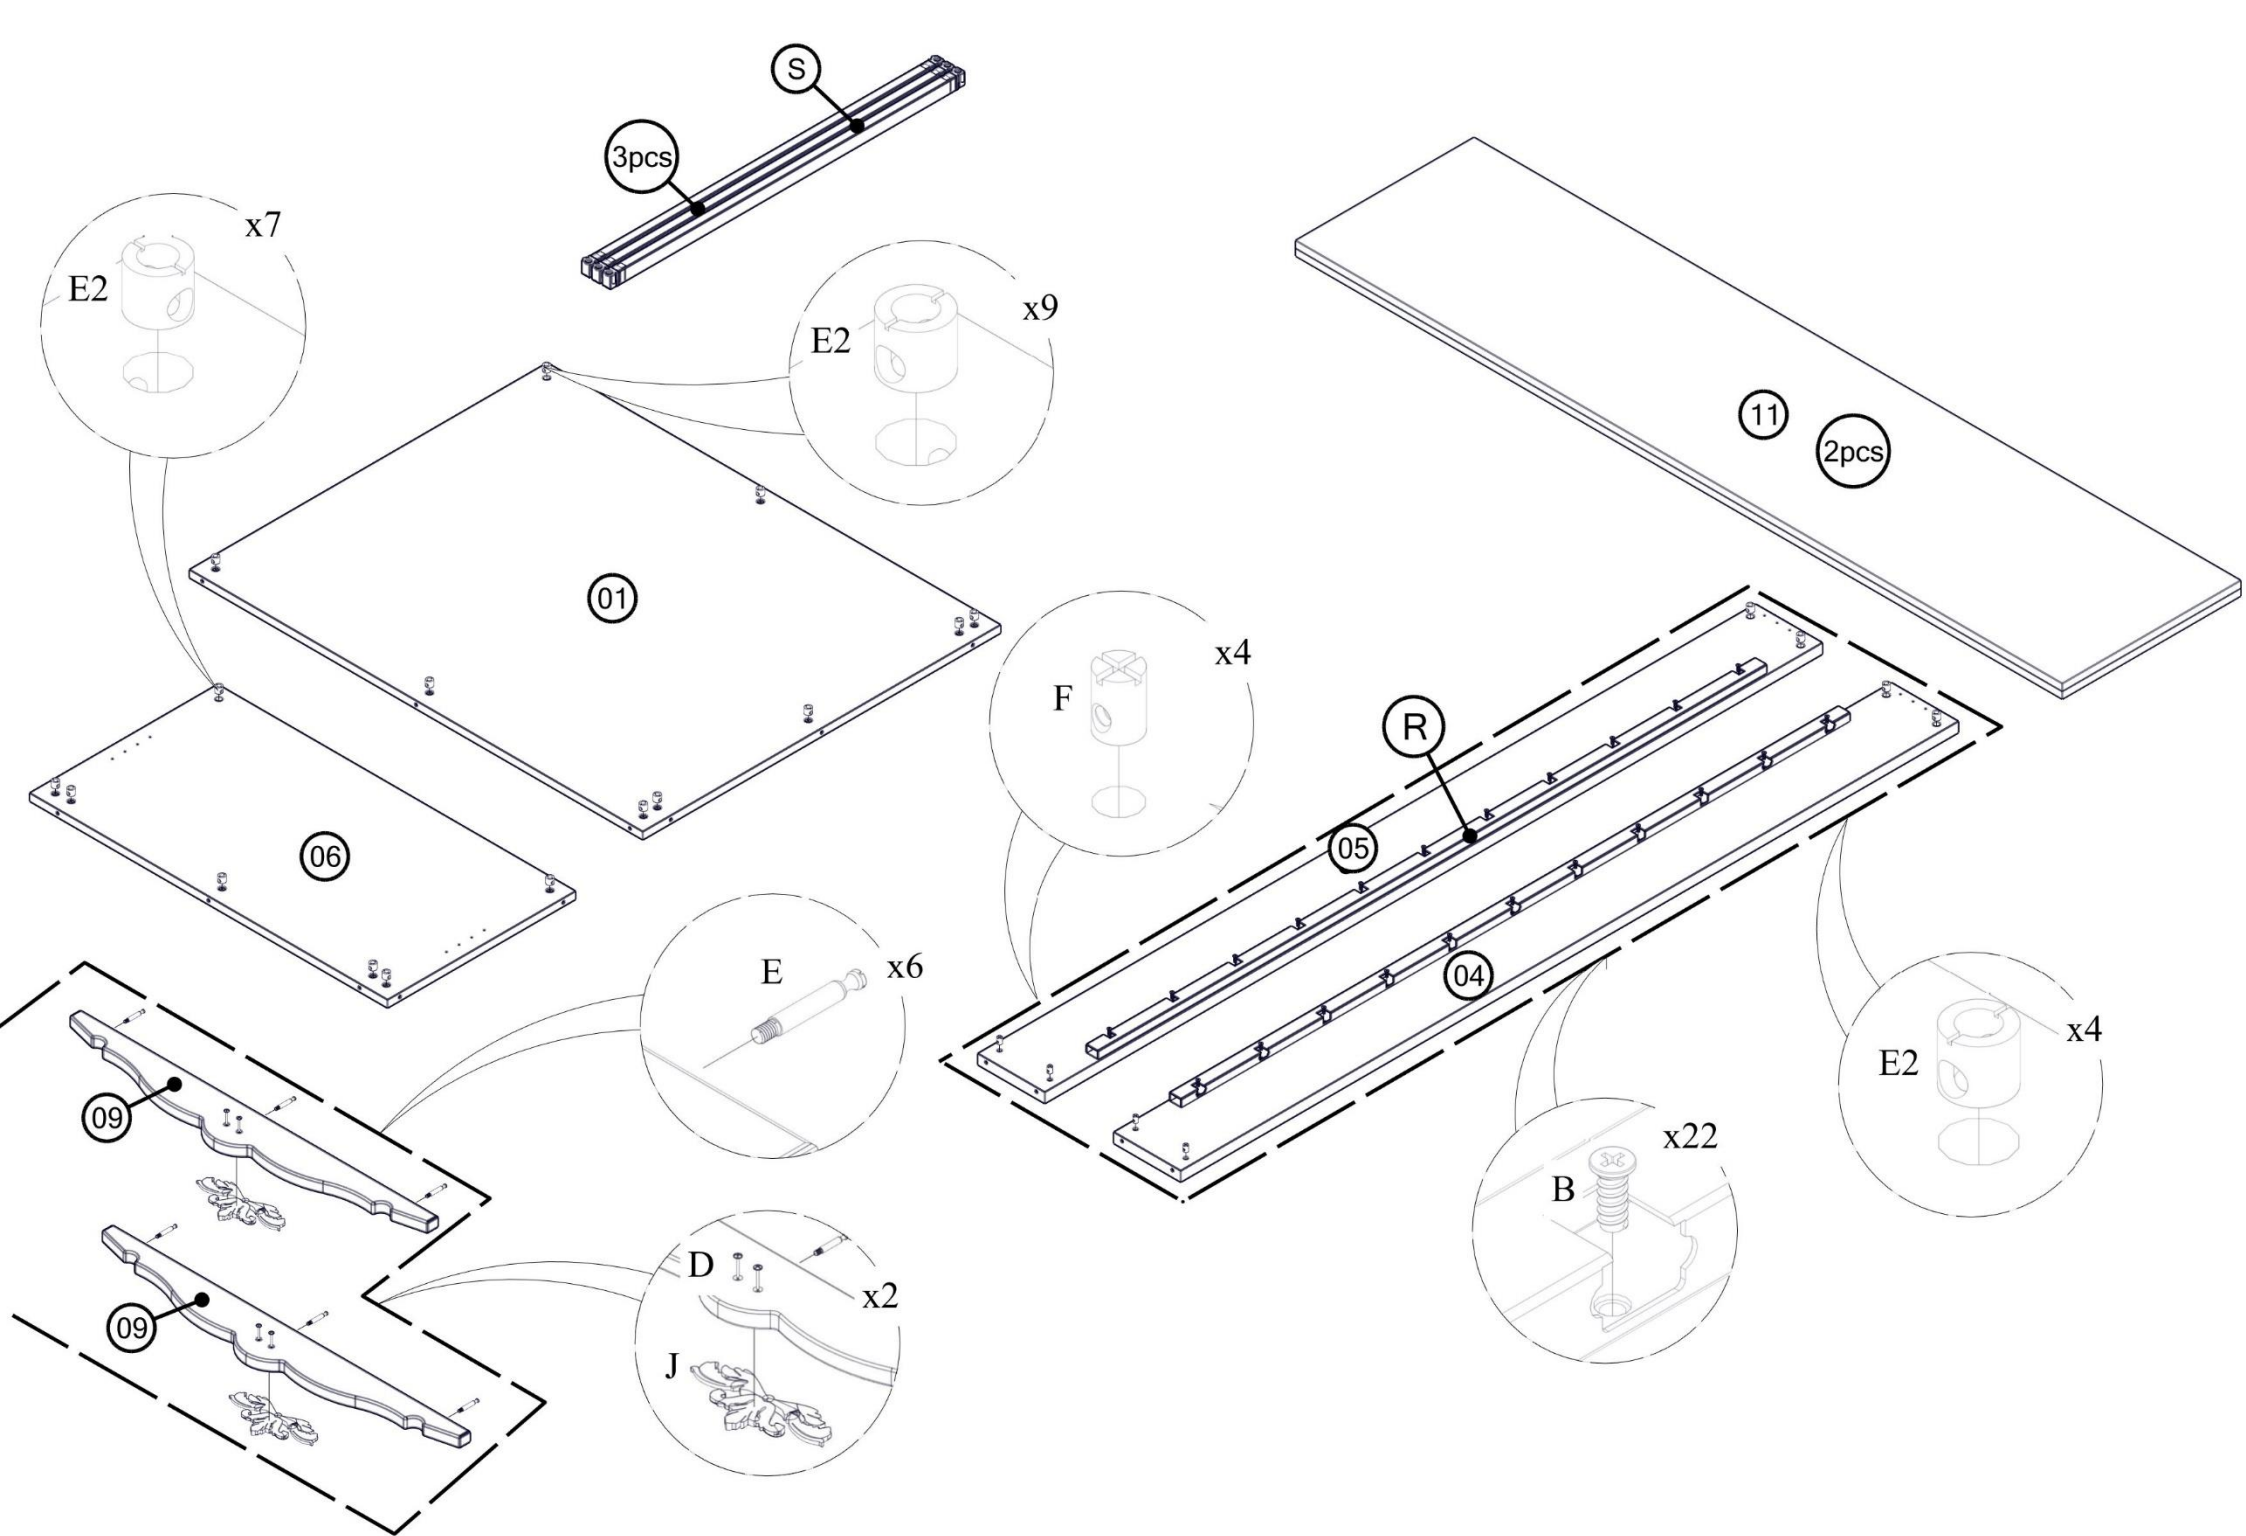


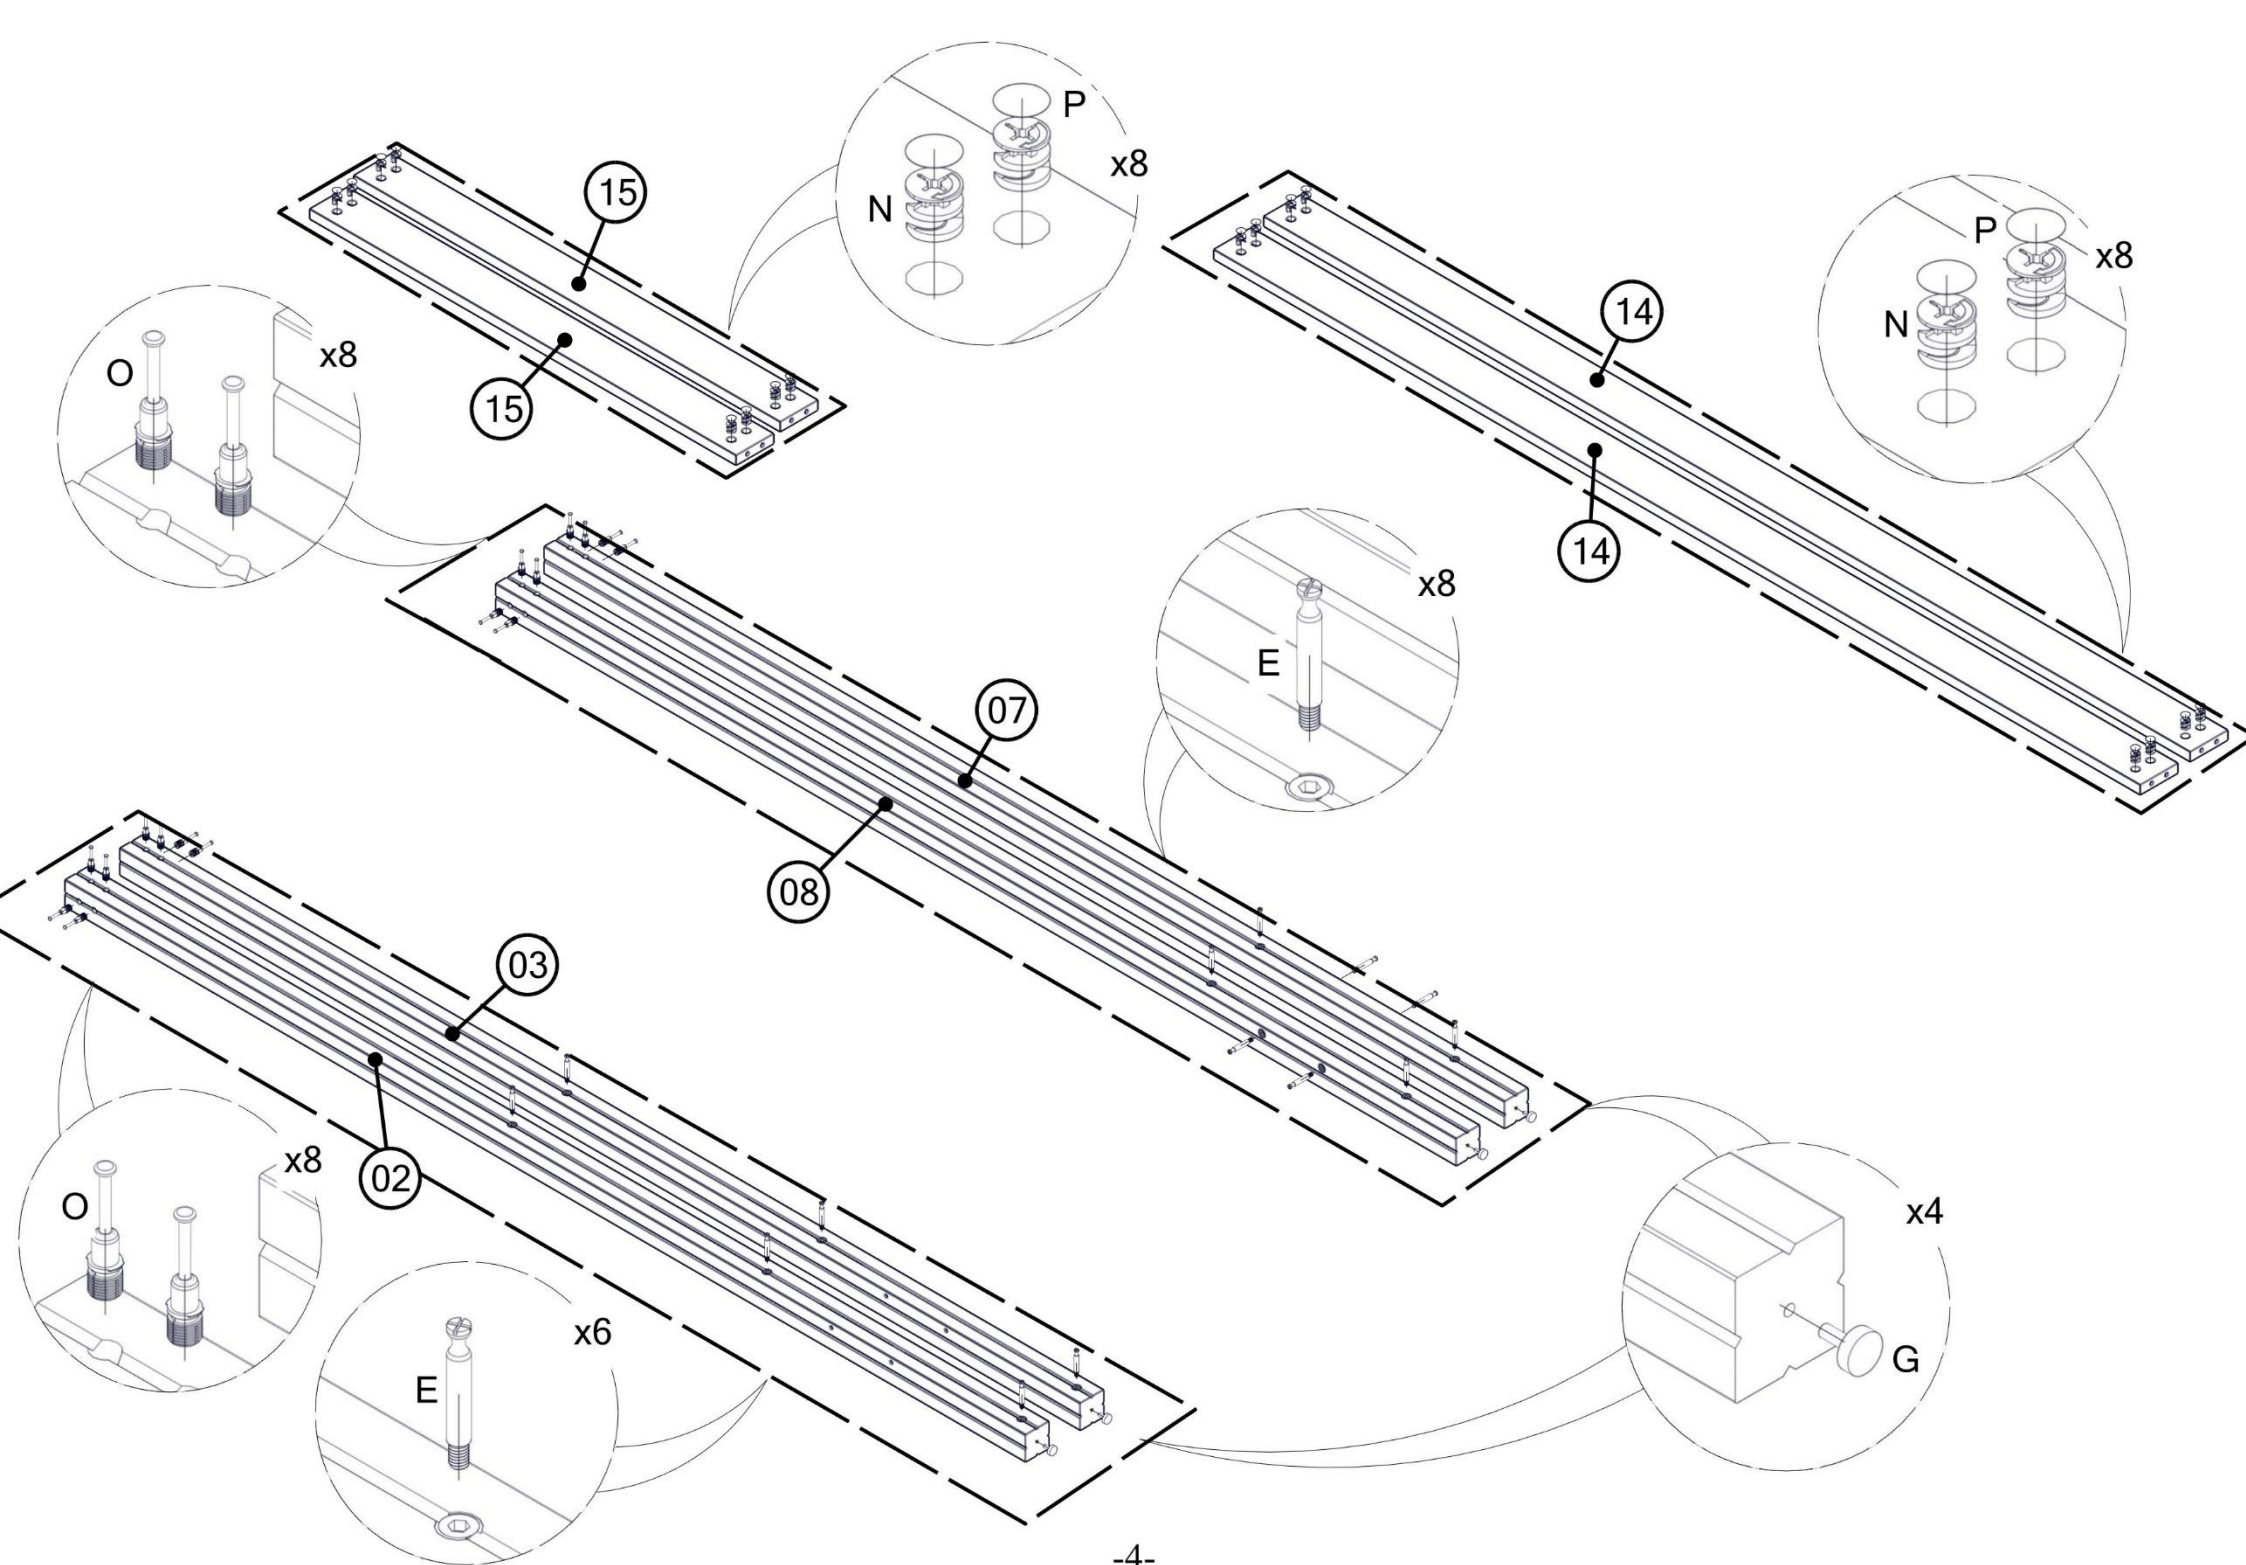

5

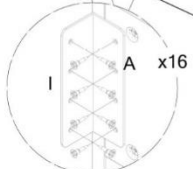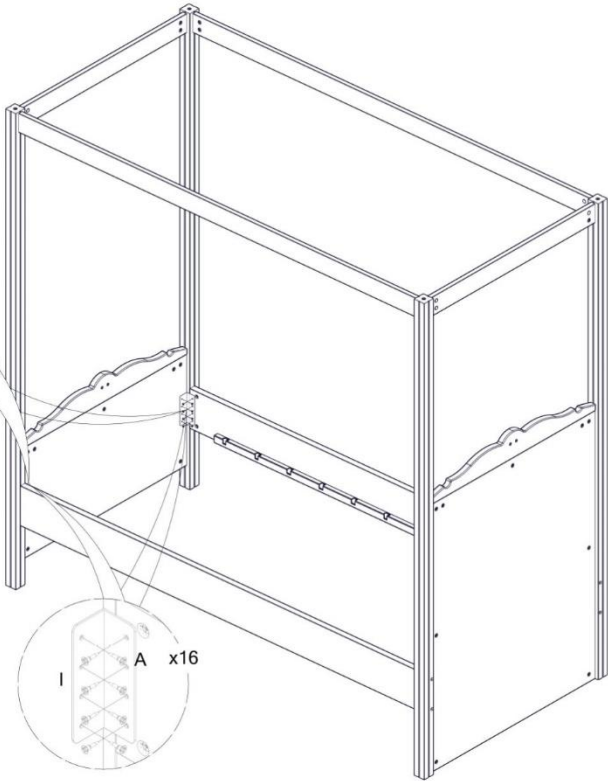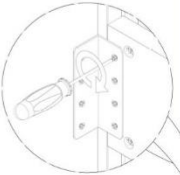

6

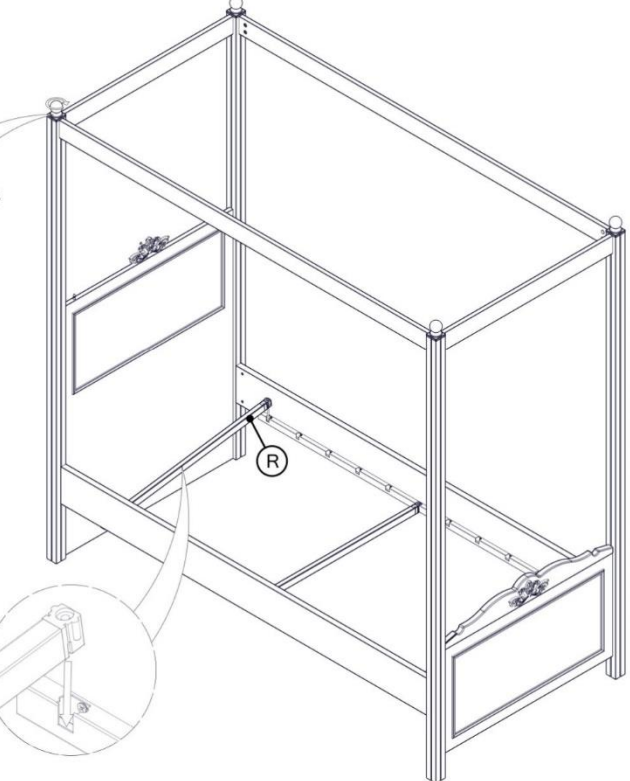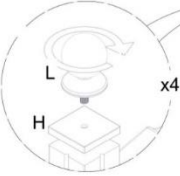

7

