




Montaj Talimatı (Assembly Instruction) -1

ARWEN - HEADBOARD & BEDFRAME (90-100-120)^(v01)

OPTIONAL

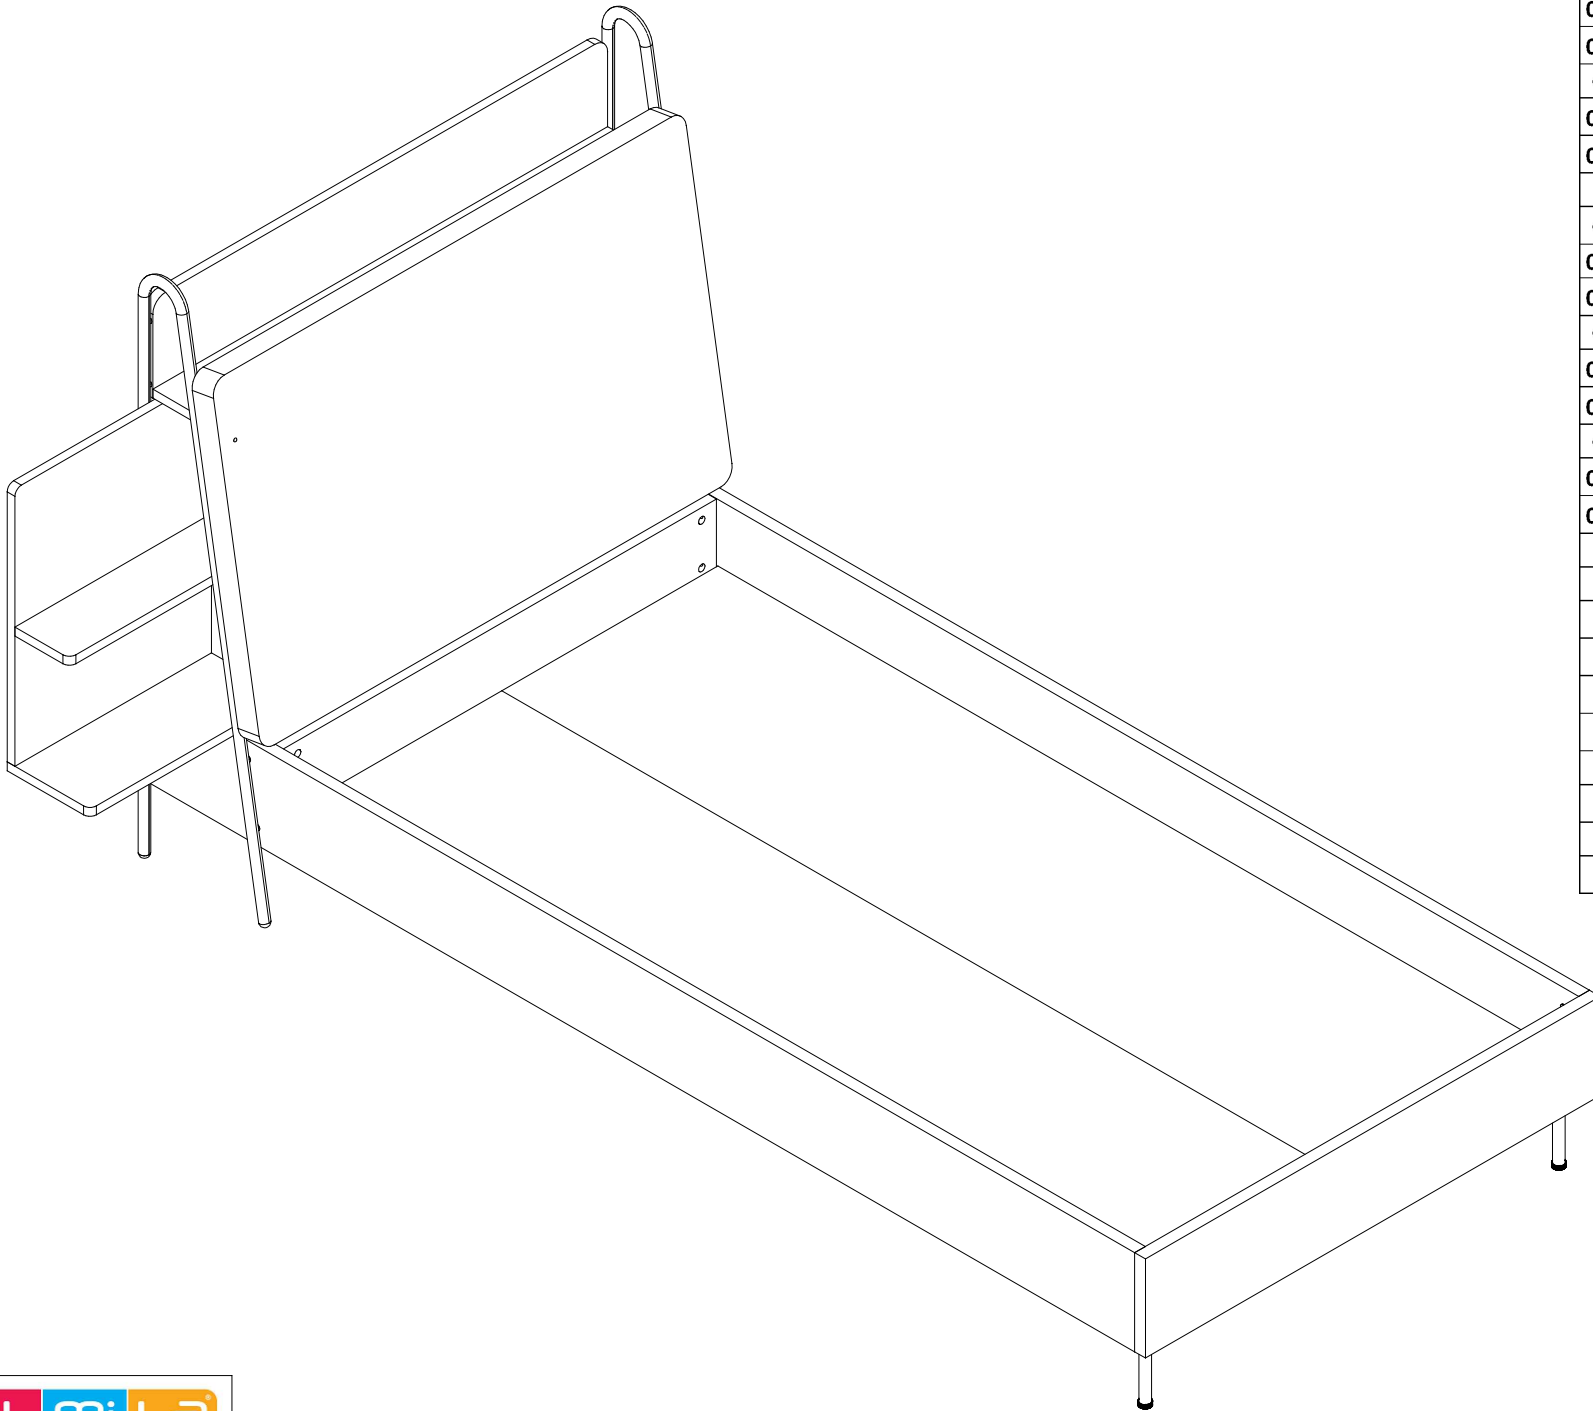








C	W	x	L	x	H	A	B	C	D
01(90)	960	x	199	x	18				
01(100)	1060	x	199	x	18				
01(120)	1260	x	199	x	18				
02(90)	960	x	120	x	18				
02(100)	1060	x	120	x	18				
02(120)	1260	x	120	x	18				
04	2308	x	200	x	25				
05(90)	910	x	145	x	25				
05(100)	1010	x	145	x	25				
05(120)	1210	x	145	x	25				
06(90)	2000	x	200	x	25				
06(100)	2000	x	200	x	25				
06(120)	2000	x	200	x	25				
07(90)	960	x	200	x	25				
07(100)	1060	x	200	x	25				
07(120)	1260	x	200	x	25				
08	2308	x	200	x	25				
09	560	x	458	x	18				
10	458	x	127	x	18				
11	1950	x	504	x	17				
12	458	x	193	x	18				
13	578	x	195	x	18				
14	560	x	458	x	18				
15	458	x	127	x	18				
16	458	x	193	x	18				
17	578	x	195	x	18				

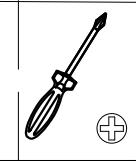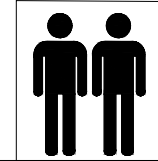

N	O
2	2
V	Y
8	16

Montaj Talimatı (Assembly Instruction) -5

ARWEN - HEADBOARD & BEDFRAME (90-100-120)-(v01)

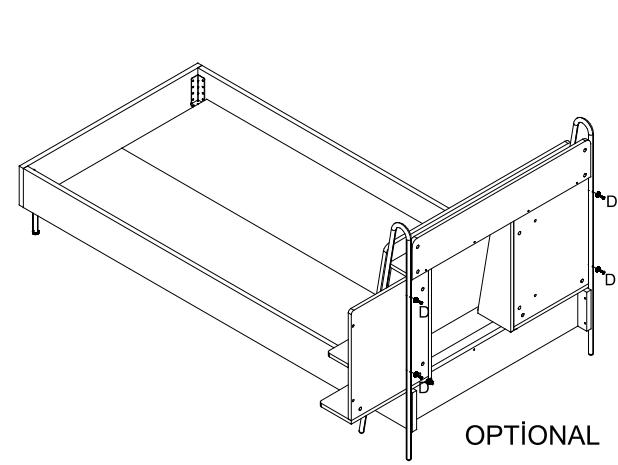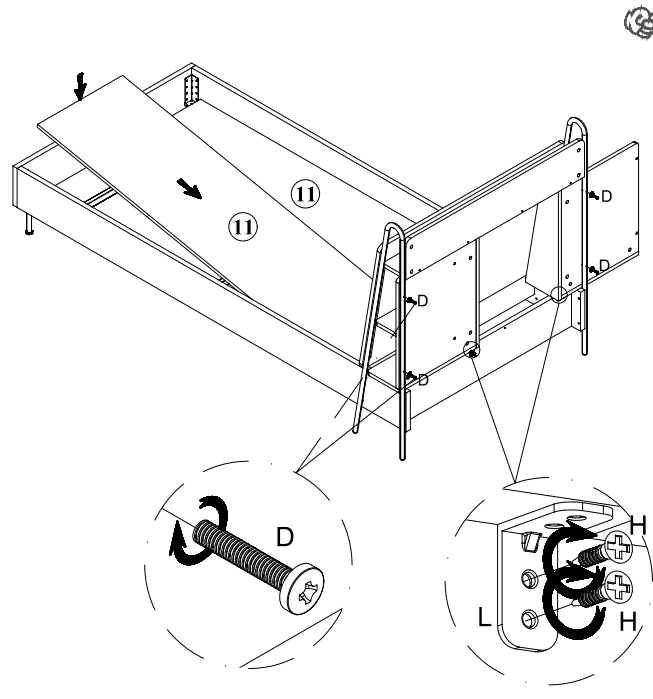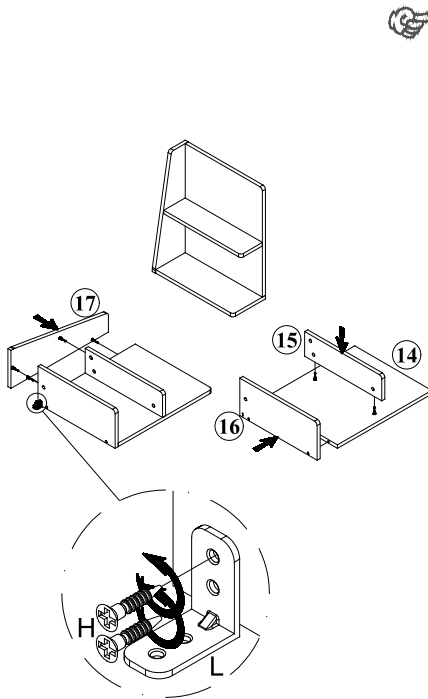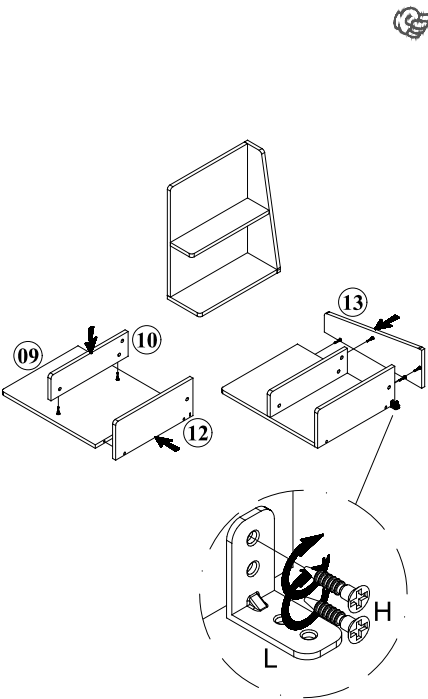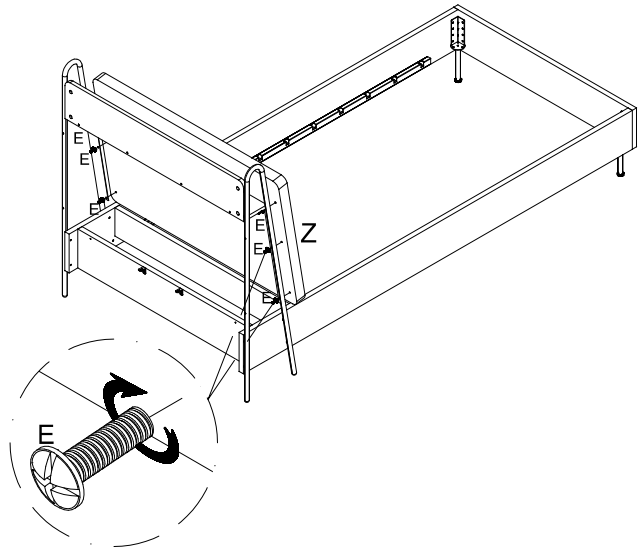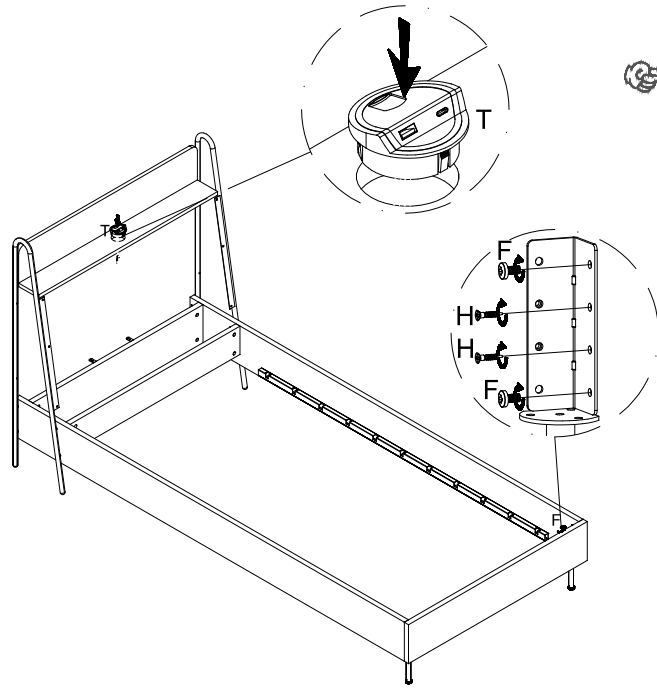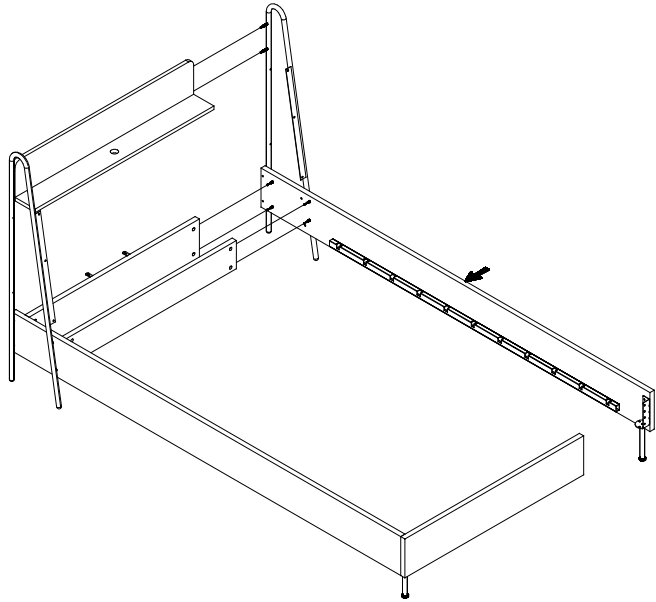

OPTIONAL